

Installation Instructions

Hanger Kits

for HELIAX® Elliptical Waveguide and Coaxial Cable

 
Bulletin 37378 Rev G

Angle

adaptor

Recommended Hanger Spacing


Add Support Bracket




Open the hanger and attach it to an adaptor or a tower member as shown in the examples below.


Waveguide	Gap (G)	Spacing (S)
EW/EWP180/240	1/4" (6.35 mm)	20 in (508 mm)
EW/EWP220	_	20 in (508 mm)
Cable	Gap (G)	Spacing (S)
HJ/HT/LDF4	_	30 in (762 mm)
EFX2-50	_	30 in (762 mm)
FSJ2-50	_	30 in (762 mm)
LDF2-50	_	30 in (762 mm)



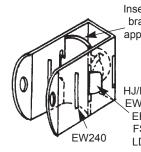





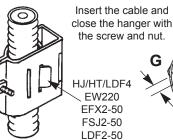

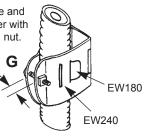

Attaching Hangers

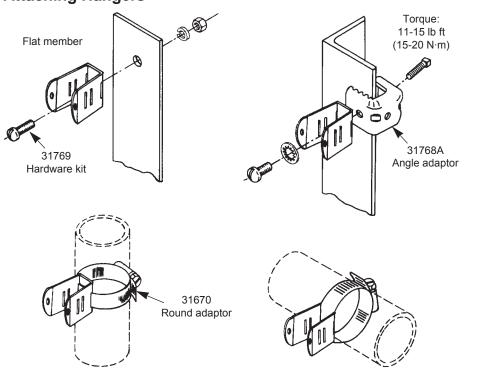

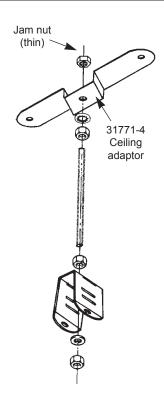

ANDREW an Amphenol company

2601 Telecom Parkway, Richardson, Texas, 75082, USA www.andrew.com

Technical Support

+1 888 297 6433, Option 3 (Toll Free US and Canada) awpnarsupport@andrew.com

Notice: ANDREW disclaims any liability or responsibility for the results of improper or unsafe installation, inspection, maintenance, or removal practices.

Aviso: ANDREW no acepta ninguna obligación ni responsabilidad como resultado de prácticas incorrectas o peligrosas de instalación, inspección, mantenimiento o retiro.

Avis: ANDREW décline toute responsabilité pour les conséquences de procédures d'installation, d'inspection, d'entretien ou de retrait incorrectes ou dangereuses.

Hinweis: ANDREW lehnt jede Haftung oder Verantwortung für Schäden ab, die aufgrund unsachgemäßer Installation, Überprüfung, Wartung oder Demontage auftreten.

Atenção: A ANDREW abdica do direito de toda responsabilidade pelos resultados de práticas inadequadas e sem segurança de instalação, inspeção, manutenção ou remoção.

Avvertenza: ANDREW declina eventuali responsabilità derivanti dell'esecuzione di procedure di installazione, ispezione, manutenzione e smontaggio improprie o poco sicure.

注意: ANDREW 公司申明對於不恰當或不安全的安裝、檢驗、維修或拆卸操作所導致的后果不負任 何義務和責任